

EAGLETON

EAGLETON
Massage Chair
User Manual



※ The images or content descriptions in this manual may change due to product improvements without prior notice.
※ The images in this manual are simulated for user understanding. It may be different from the actual massage chair.
※ The images in this manual are slightly different from the actual massage chair depending on user's choice of the product model.

Greetings

Thank you for purchasing the Massage Chair [EAGLETON].

Please read this user manual for safe and convenient use.

The product may change for improved performance without any notice, in which case it may be different from corresponding descriptions and images in this user manual.

※ Please read the safety precautions first and use the product appropriately.

※ Please keep this manual in a place where users can access and read it at any time.

※ The product image or content descriptions may change due to product improvements without prior notice.

Product Features




Special



XD FLEX



Healthcare

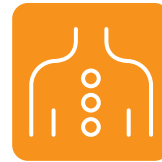

Focused Area




Stress Relief



My Personalized



Flexible SL Frame

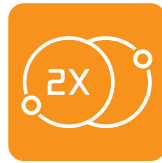

Dual Massage
Module



2 STEP
Sole Rolling Massage



Heating
Sheet



Quick Dial



12 Safety Sensors



Auto-connect
Bluetooth



Controller App



C-type
USB Charging

Dual Massage Module

XD FLEX 마사지 모듈과 3D 마사지 모듈이 상하로 탑재되어 넓은 부위를 더욱 섬세하게 마사지해 줍니다.

번역필요

Separately moving leg massage unit

The left/right leg massage units move separately.

Improved Safety

There are 12 object-detecting sensors in the leg unit and back of the massage chair to improve safety for users.


Table of Contents

Instructions Before Use	Greetings · Product Features	02
	Safety Precautions	04
	Components and Descriptions	13
	Moving and Installation	14
	How to Connect the Product · Object detection guide	15
Controller Information	Quick Dial Descriptions	16
	Downloading the Controller App	18
	Controller Operation Description	19
Program Descriptions	Special · Healthcare	29
	Focused Area · Stress Relief	30
Function Information	Dual Massage Module Description	31
Product Specifications	Product Size and Specifications	32
Customer Service and Troubleshooting	Customer Support Guidelines	33
Product Warranty	Warranty Terms and Conditions	34

워런티확인필요

Safety Precautions

- ※ The descriptions below are for using the product safely and accurately to prevent any unexpected risk or damage.
- ※ The safety precautions have two categories below depending on the expected risk and damage, and urgency if used incorrectly:

 **Warning** To reduce the risk of any burn, fire, electric shock, or physical damage

 
 **Caution** To reduce the risk of physical damage

Precautions Before Using

Warning


Do not install in bathrooms or areas with high humidity.

It may cause electric shock, fire, product deformation, or malfunction.

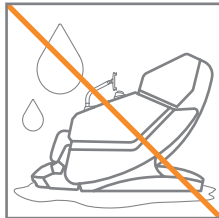


Avoid using in areas with dust or areas prone to rust.

It may cause electric shock, fire, product deformation, or malfunction.

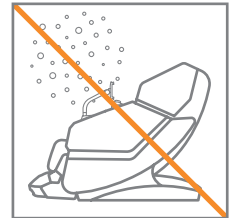


Do not operate in settings with temperatures exceeding 40°C.

It may cause fire or malfunction.

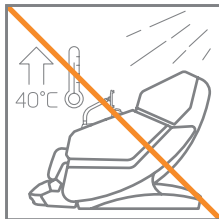


Do not install it outdoors.

It may cause safety accidents, physical damage, product damage, or malfunction.

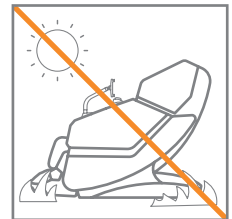


Do not use near heaters or any heat-emitting objects.

It may cause product damage, fire, or malfunction.

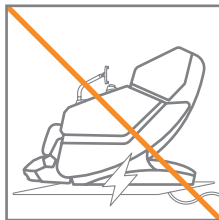

Install and use only on a flat, stable surface.

It may cause safety accidents, physical damage, product damage, or malfunction.

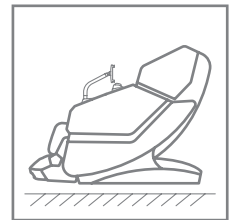


Safety Precautions

Precautions Before Using


Warning

Use in areas with ample space and satisfactory air circulation.

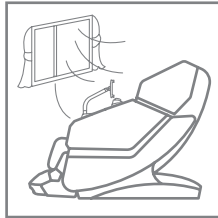


It may cause product deformation, mold, or malfunction.

Users should not disassemble parts.

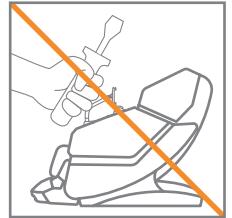


It may cause safety accidents, physical damage, product damage, or malfunction.

Do not use simultaneously with other electronic or medical devices.

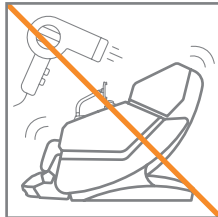


It may cause safety accidents, physical damage, product damage, or malfunction.

Do not spill or spray foreign substances on the product.

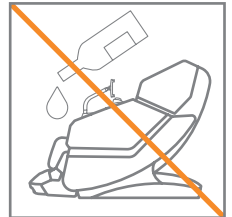


It may cause safety accidents, physical damage, product damage, or malfunction.

Do not place heavy objects on this product.

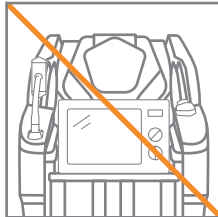

It may cause safety accidents, physical damage, product damage, or malfunction.


Please take precautionary measures to ensure toddlers, pets, etc., do not crawl under or onto the back of the chair, leg rest, etc.

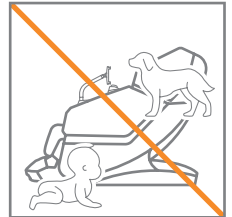

It may cause safety accidents, physical damage, product damage, or malfunction.


Caution

Do not install or repair without the assistance of technicians.

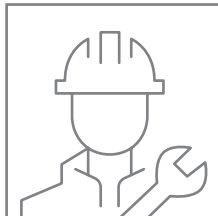

It may cause safety accidents, physical damage, product damage, or malfunction.

Do not use the product for purposes other than what is stated in this Manual.

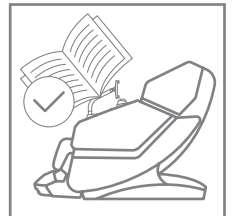


It may cause safety accidents, physical damage, product damage, or malfunction.

Safety Precautions

Precautions Before Using


Caution

Do not move the product by its power cable or pull the cable with your hand.

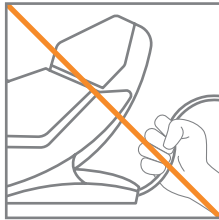


It may cause electric shock, fire, or malfunction.

Only connect the product to outlets with protective grounding.

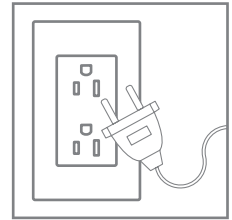


It may cause electric shock or injury.

Check if the product is connected to power before use.

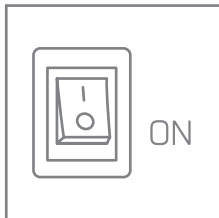


This allows for appropriate use of the product.

Plug device into a 220-240V~ power outlet only.

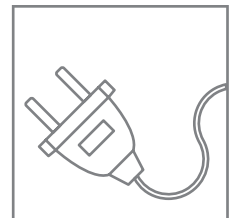


It may cause electric shock or malfunction.

Do not install in settings where it is difficult to unplug.

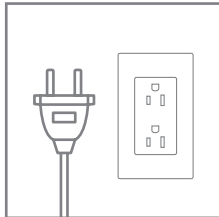


It may cause safety accidents, physical damage, product damage, or malfunction.

When unplugging the power plug, make sure to hold the power plug itself instead of pulling the cable.

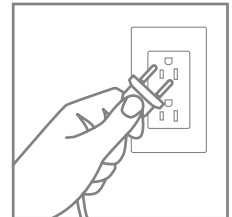


It may cause electric shock, fire, or malfunction.

Use the massage chair after checking safety sensors and if any children or pets are around.

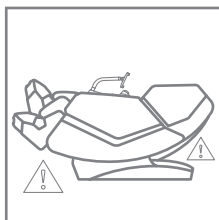

It may cause safety accidents, physical damage, product damage, or malfunction.

Please note that the sheets may become discolored from dark-colored clothes, including jeans.

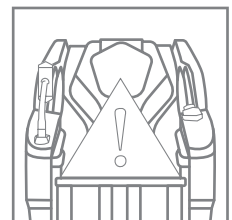


It may cause sheet discoloration.

Safety Precautions

Precautions for Use


Warning

Check how to use the product and its possible side effects.

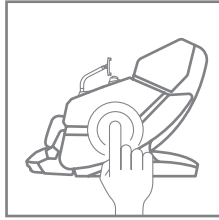


This allows for appropriate use of the product.

Do not connect or disconnect the power plug with wet hands. It may cause electric shock.

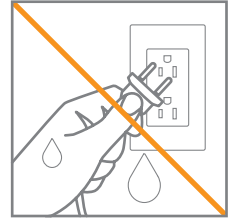

It may cause electric shock, fire, or malfunction.

Do not use the chair if your body is wet.

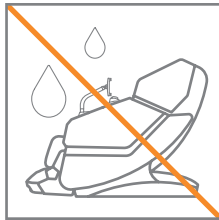


It may cause electric shock, fire, or malfunction.

Do not use the massage chair directly after a heavy meal.




It may cause physical damage.

Be careful not to let any body parts get caught during use.

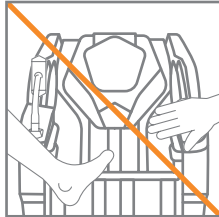


It may cause safety accidents, physical damage, product damage, or malfunction.

Be careful not to focus on a certain body part for too long as it may become excessive.

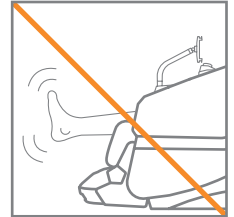


It may cause safety accidents, physical damage, product damage, or malfunction.

Disconnect the power plug from the socket when the massage chair is not in use.

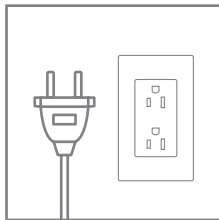


It may cause electric shock or malfunction.

Toddlers and babies should not use the massage chair.

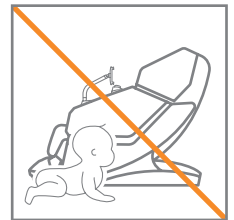


It may cause safety accidents, physical damage, product damage, or malfunction.

Do not place your head, elbows, chest, abdomen or knees on the massage chair and attempt to use it.

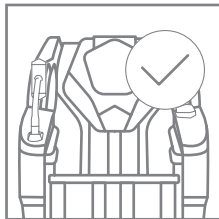

It may cause safety accidents, physical damage, product damage, or malfunction.

Control the massage balls to ensure they are being operated in the right position.

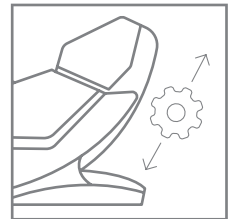

It may cause safety accidents, physical damage, product damage, or malfunction.


Safety Precautions

Precautions for Use

Warning


Wait until the reclining unit returns to its original position to get off the chair.

It may cause safety accidents, physical damage, product damage, or malfunction.

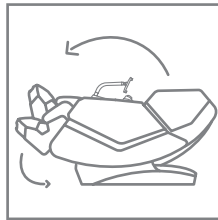


Stop using the massage chair immediately if you experience any pain or discomfort and take appropriate measures for your health.

It may cause physical damage.

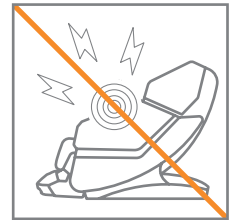


Consecutive uses may burden your body. Select whether to keep using it according to your health condition.

It may cause physical damage.

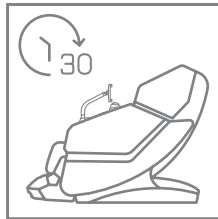

Prevent children or pets from playing around the massage chair during the operation.

It may cause safety accidents, physical damage, product damage, or malfunction.

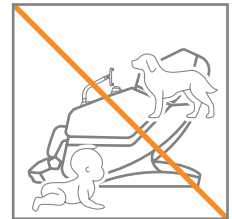


Do not operate the massage chair where aerosol (spray) products are being used or oxygen is being administered.

It may cause product damage, fire, explosion or malfunction.




Do not operate the massage chair when wearing accessories.

It may cause safety accidents, physical damage, product damage, or malfunction.

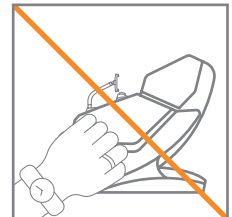


Ensure that long hair does not become entangled in the massage chair.

It may cause safety accidents and physical damage.

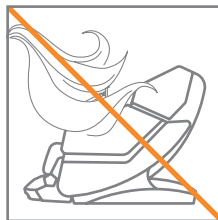


Do not drop or insert any objects in the empty spaces.

It may cause safety accidents, physical damage, product damage, or malfunction.

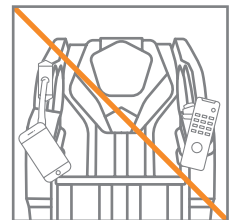


If the cable or plug malfunctions, is damaged, or is soaked in water, do not operate the massage chair. Contact the Customer Service Center for inspection and repair.

It may cause electric shock, fire, or malfunction.

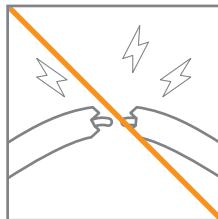

Be aware not to burn when using the heating feature.

It may cause a low-temperature burn.

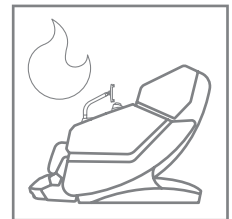


Safety Precautions

Precautions for Use

Warning


Sit in an appropriate position in the massage chair.

It may cause safety accidents, physical damage, product damage, or malfunction.

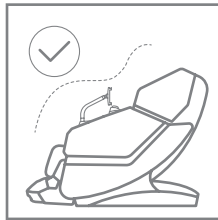

Do not use the massage chair when the cover is torn or removed.


It may cause safety accidents, physical damage, product damage, or malfunction.

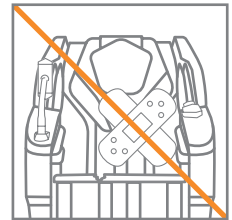

Caution


Do not let more than two people operate the massage chair at the same time.

It may cause safety accidents, physical damage, product damage, or malfunction.

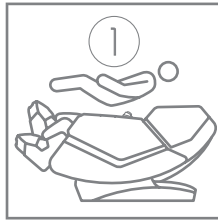


Avoid using the massage chair where the ambient temperature rapidly changes.

It may cause physical damage or injury.

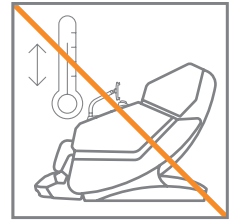


Do not apply more than 120kg pressure on the product.

It may cause safety accidents, deformation, noises, product damage, or malfunction.

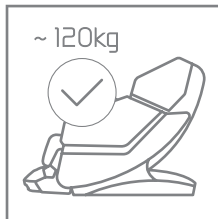

People shorter than 150cm or taller than 190cm may feel different when massaging.

It may cause a lack of tightness between massage product damage, or malfunction.

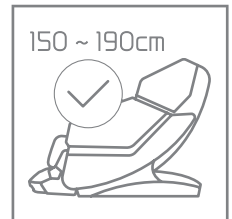

Do not stand on the massage chair. Please use it in the sitting position.

It may cause safety accidents, physical damage, product damage, or malfunction.



Be careful of catching hypothermia when falling asleep after a massage.

It may cause safety accidents, physical damage, etc.




Safety Precautions

Precautions for Use


Caution

Make sure the cable is not damaged or excessively bent.

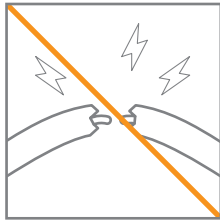


It may cause electric shock, fire, or malfunction.

Please start at a lower intensity for safe use.

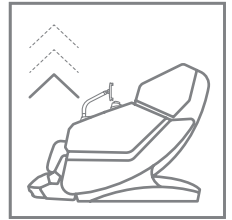


It may cause physical damage.

Do not hold the leg massage unit with your hands.

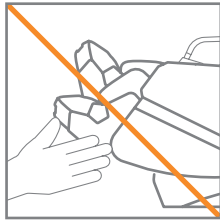


It may cause safety accidents, physical damage, product damage, or malfunction.

Do not lean or hang on the back side of the massage chair.

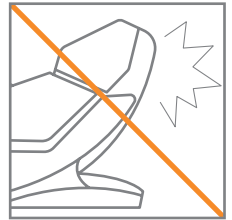


It may cause safety accidents, physical damage, product damage, or malfunction.

Prevent pets from biting the power cable.

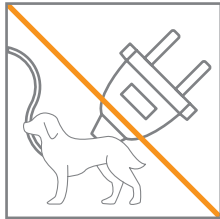

It may cause electric shock, product damage, or malfunction.

Do not stand on the leg rest when the massage chair is reclining.

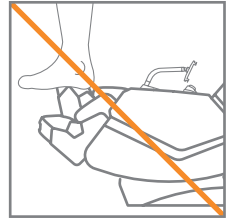


It may cause safety accidents, physical damage, product damage, or malfunction.

Please ensure the power switch is off before connecting the power.



It may cause electric shock, product damage, or malfunction.

Do not sit on the back of the massage chair, arm massage unit, or leg massage unit.

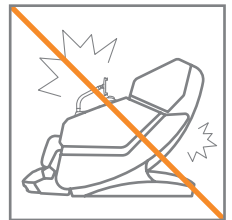

It may cause safety accidents, physical damage, product damage, or malfunction.


Safety Precautions

Precautions for Use

Caution

Do not use the Bluetooth speaker at a loud volume for a long period of time.

It may damage your hearing ability.

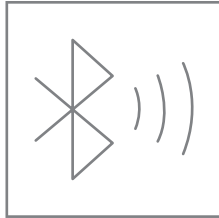


Do not stand up while holding the Controller holder with your hands.

It may cause safety accidents, physical damage, product damage, or malfunction.




Do not wash the product with water.

It may cause electric shock, fire, or malfunction.

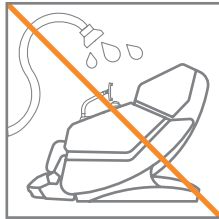


Please disconnect the power plug before cleaning or mending the massage chair.

It may cause safety accidents, physical damage, product damage, or malfunction.

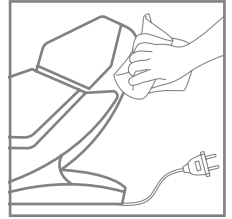

Gently remove dirt with a soft cloth and do not use organic solvents, such as thinner, or chemicals.

It may cause product damage.

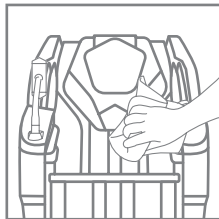

Safety Precautions

Precautions

✓ Do not use the product if

- Doctor diagnoses to not use this massage chair for those who suffer from thrombosis, embolism, a serious varicose veins
- Pregnant women in the first trimester or the beginning of the third pregnancy trimester
- Those who suffer from severe diseases related to the heart, kidneys, or liver
- Those who suffer from schizophrenia or other mental disorders
- Those who suffer from uncontrollable epilepsy or other brain diseases
- Those who cannot move by themselves

✓ Before use, consult with a specialist if

- Pregnant women other than those who are within the first trimester and may experience side effects from the use
- Those who have higher body temperature and suffer from acute inflammation, including chills and fever
- Those who suffer from severe skin disease, including pressure sore or burn
- Those who suffer from a malignant tumor
- Those who are old, suffer from extreme weight loss or loss of muscle tissue due to other diseases
- Those who need to stay in bed due to medical treatment
- Those who are diagnosed with acute disc and acute cervical sprain
- Those who suffer from severe osteoporosis
- Those who are using implantable electronic medical devices, including implantable pacemaker
- Those who lack communication ability
- Those who have difficulty moving their body
- Those who have any other health concerns
- Those with joint discomfort due to hip or knee joint surgeries (artificial joint, fracture, etc.)

Instructions for Use Heating Feature

- If using the product long without rest, it may cause a low-temperature burn or any other risks.
- Do not let skin come in direct contact with parts of the massage chair that heat up.
- Supervise young children, seniors, and patients when they are using this product as they have sensitive skin.
- Do not fall asleep with the heating function on.

Possible Side Effects

✓ Please note the following side effects, which may occur during use.


- Minor abrasions, bruising, etc.
- Damage to muscle or tendon injury due to overuse or too much pressure
- Allergic reactions and burns
- Elderly spine fractures, dislocated joints, etc.

Components and Descriptions

Opening the box


This product is packaged in two boxes. Please check that you have received all the necessary parts.

- **Main Body Box:** Body, Back · Hips Sheet, Head Sheet, Accessory Box (Power Cable, Controller Holder, Manual)
- **Leg Unit Box**

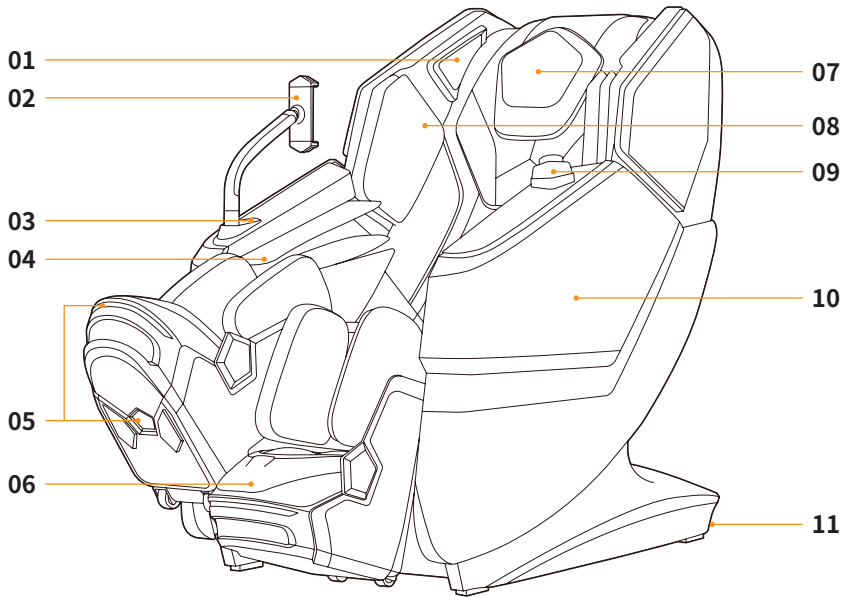

Exterior

- 01 Speaker
- 02 Controller Holder
- 03 C-type Charging Port
- 04 Arm Massage Unit
- 05 LED
- 06 Leg Massage Unit
- 07 Head Sheet
- 08 Shoulder Massage Unit
- 09 Inside Key
- 10 Side Panel
- 11 Wheels for ease of movement

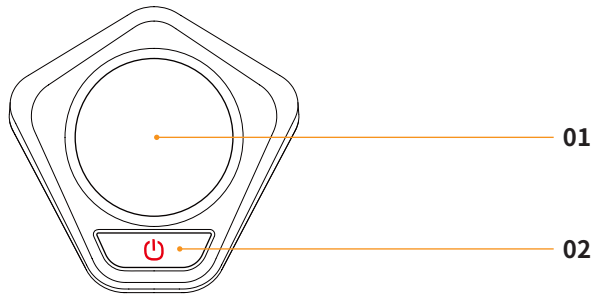

Inside Key

- 01 Quick Dial
- 02 Power ON/OFF

번역필요

✓ 거치대 사용 시 유의 사항

- 스마트폰/태블릿을 거치 후 충전 시, 케이스 또는 케이블 두께에 따라 호환되지 않을 수 있습니다.

✓ C타입 충전 단자 사용 시 유의 사항

- PD 충전 미지원 기기의 경우 호환되지 않을 수 있습니다.
- 20W 이상의 PD 케이블이 아닌 경우 호환되지 않을 수 있습니다.


※ PD 충전(USB Power Delivery): USB-C TYPE을 이용한 고속 충전 기술

Moving and Installation

Moving method and checking for leg room

- 01 Before installation, check whether there is enough room for installation.
- 02 Remove all obstructions or miscellaneous objects around the product.
- 03 Do not install the product with its back facing a glass window.
- 04 Recline the product until it is convenient enough to move, then move it to the desired location.
Install it by slowly putting it down.
- 05 Be careful that the cables do not become stuck under the product during installation.


- ※ The weight of the product may cause damage or discoloration to the floor.
- ※ When moving the product, make sure more than two people carry it together.

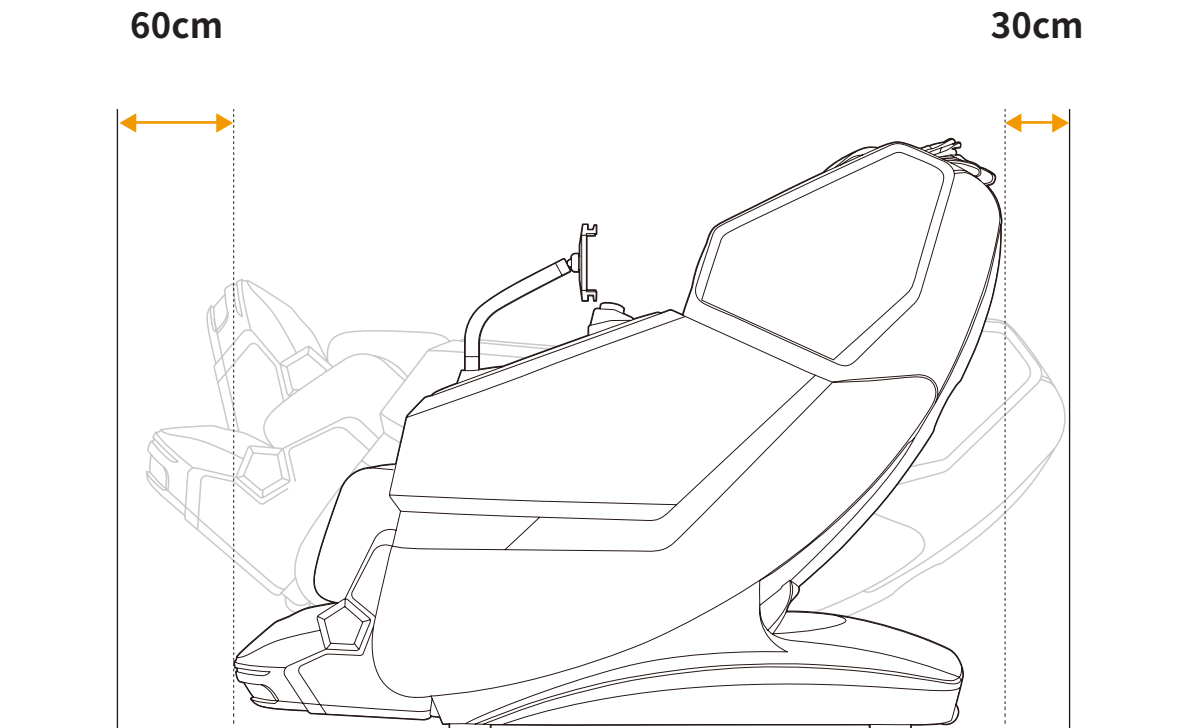

How to Connect the Product · Object detection guide


Connecting to power source

Plug the power cable into the power port positioned at the rear bottom.
Turn the power switch on after connection.

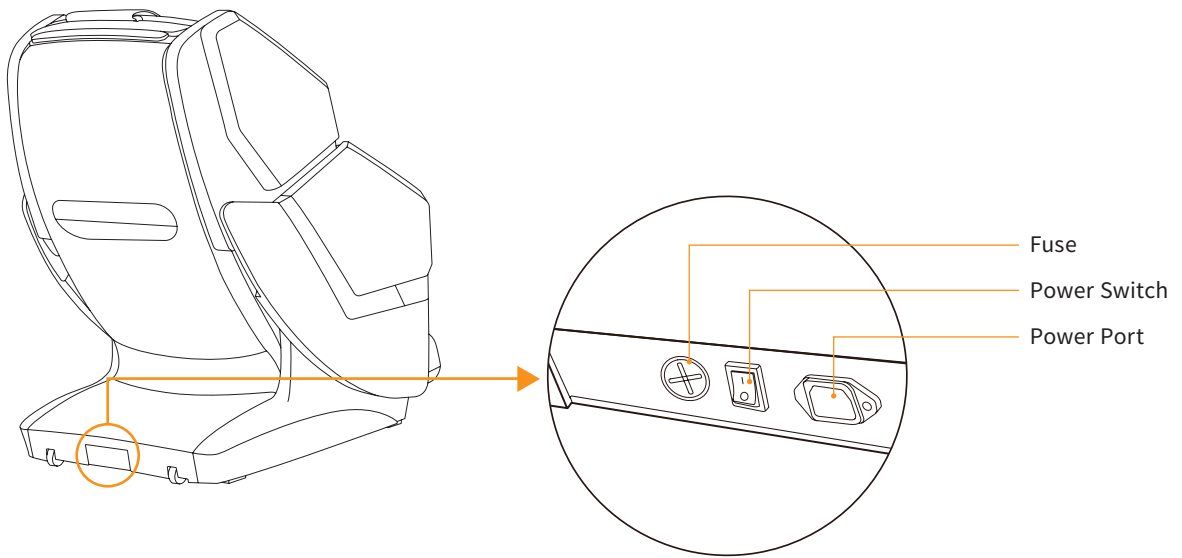

Object detection sensor location guide

Object detection sensors are positioned at a total of 12 places at the leg units and back of the massage chair.

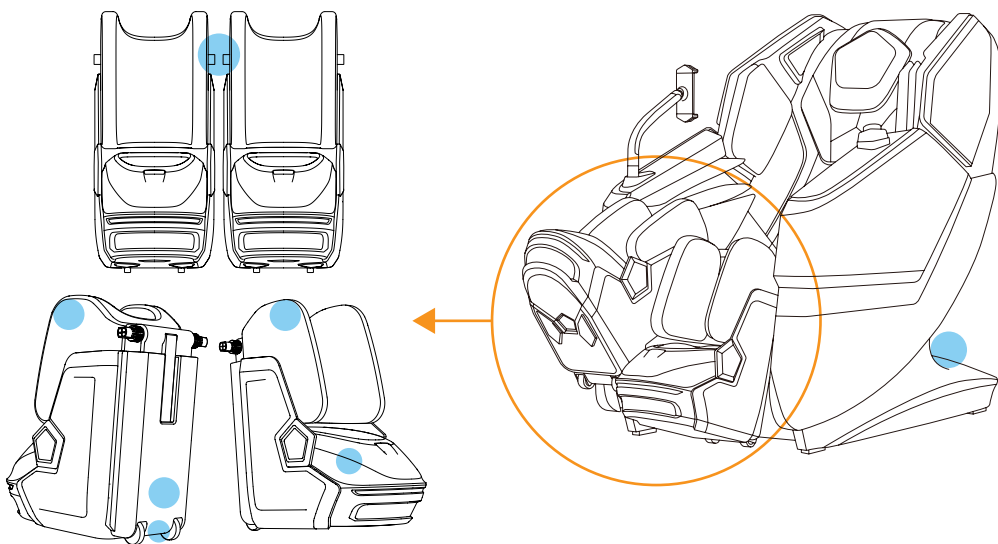

Quick Dial Descriptions

Power ON

Inside Power button



Power OFF

Inside Power button or Select Turn Off and press the Quick Dial button


※ You can press and hold the Inside Power button for more than to turn off the device immediately.
Press the power button briefly to display the turn-off confirmation screen. To turn off the device, press the Power button or the Quick Dial button after confirming.



Start Massage


Massage → Select a mode and press the Quick Dial button → Body Scan → Adjust Shoulders Position → Start massage

※ Message Mode: Signature → DUAL Neck · Back → DUAL Revitalizing → DUAL Relaxation → DUAL Stretching → Neck · Shoulders → Back · Waist → Legs · Feet

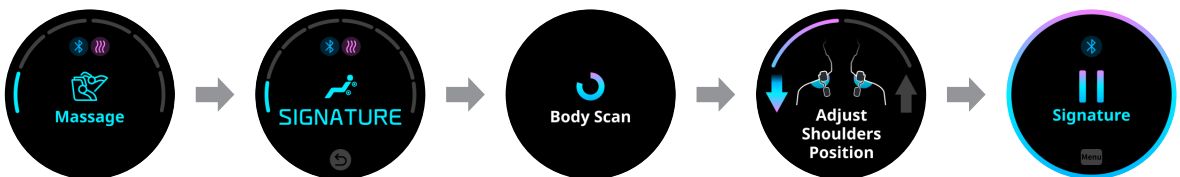

Massage Pause

 Quick Dial button or Inside Power button

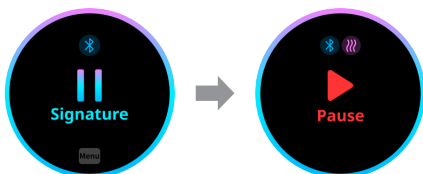

Object detection notice

Object detection guide screen → Remove the object and press the OK

※ If the object continues to be detected even after removal, check the area around the device again, then rotate the Quick Dial to the right to return it to its original position.




Quick Dial Descriptions

Intensity

Intensity → Adjust levels → Quick Dial button


- ※ Intensity levels: Soft → Medium → Strong
- ※ XD Intensity · Massage Speed · Air · Roller · Stretching intensity are adjusted simultaneously.

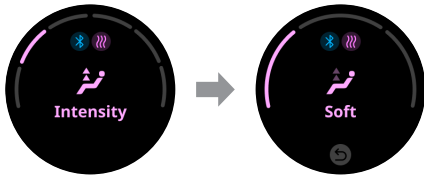

Position

Position → Adjust levels → Quick Dial button


- ※ Position levels: Upright → Zero Gravity Level 1 → Zero Gravity Level 2

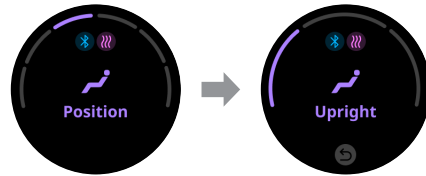

Heating


Heating → Adjust levels → Quick Dial button

- ※ Heating levels: OFF → Level 1 → Level 2 → Level 3

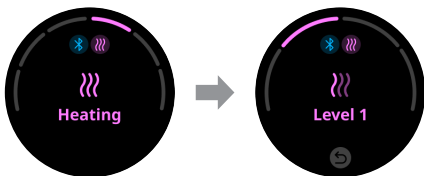

Bluetooth


Bluetooth → ON · OFF · Reset

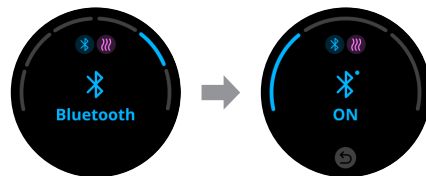

Display Auto-Off

Display Auto-Off → Select the time → Quick Dial button

- ※ Display-on time: 30 Sec → 1 Min → 3 Min → Always-on

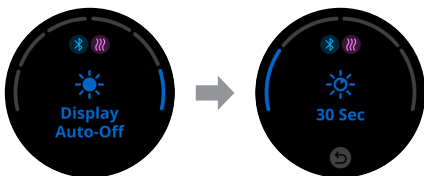

✓ Connecting to a Bluetooth Speaker

01 Quick Dial → Bluetooth → ON

- ※ Bluetooth can be searched and connected for 1 minute after activation. After 1 minute, Bluetooth remains ON but the device will no longer be discoverable by other devices.

02 Tablet Home screen → Go to Apps screen → Settings → Bluetooth → Search → Search EAGLETON and connect Bluetooth.

- ※ Name: 88 Eagleton-####

is a unique Bluetooth number of the product. If there are various massage chairs in one area, please check the serial number before connecting.

- ※ Serial number: Home → Settings → Device Information

- ※ In case of disconnection, please try again to pair the machine.

03 Bluetooth Reset: Quick Dial → Bluetooth → Reset will disconnect all currently connected Bluetooth apps and speakers. If the device fails to connect due to another device being connected, please perform the reset and then follow the above steps again.

Downloading the Controller App

How to download the Controller App

01 Prepare the tablet to be used as a Remote control.

02 Tablet Home screen → Go to Apps screen → Google Play Store → Search for 'EAGLETON', download the app, and launch it.

03 To connect the device, please allow access to the required permissions. Then, on the device selection screen, locate and connect to the 'EAGLETON' Bluetooth.

※ Name: Eagleton-####

is a unique Bluetooth number of the product. If there are various massage chairs in one area, please check the serial number before connecting.


※ Serial number: Home → Settings → Device Information

※ The required access permissions may differ by operating system.

※ To safely and conveniently use the app services, please make sure to allow the required permissions for Bluetooth and location services.

※ Apple iPad is not supported by this app.

※ This app does not support Split View mode.

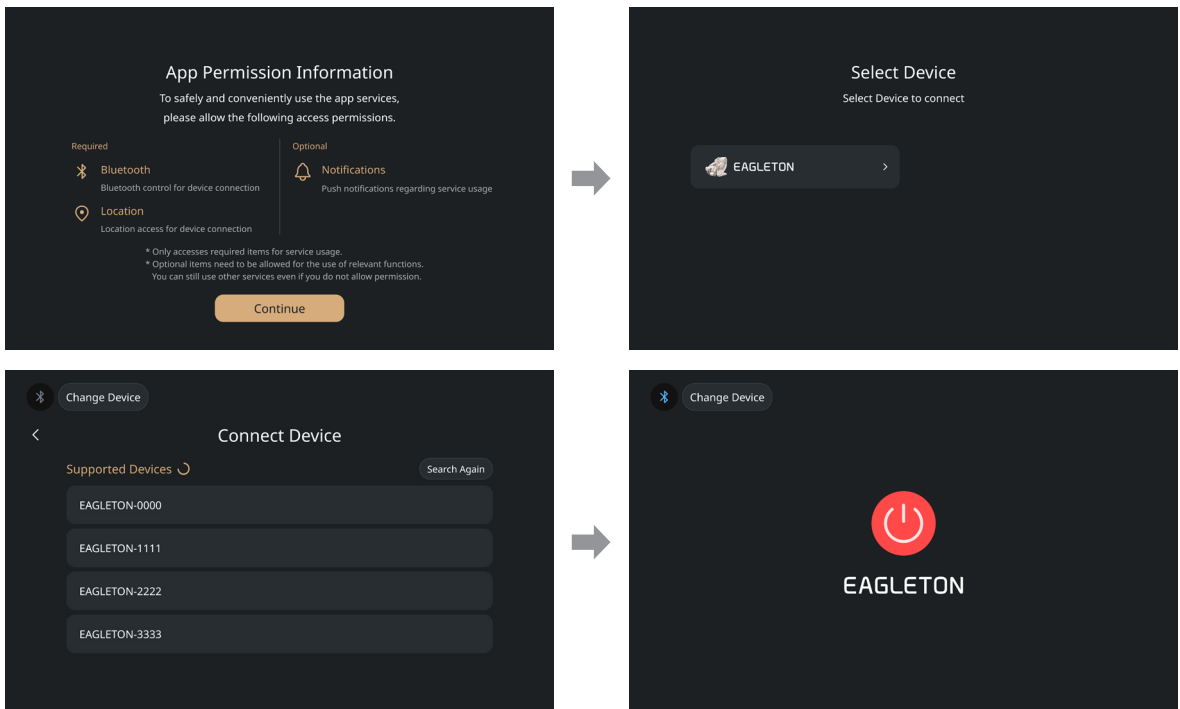

✓ Tablet - How to Return to the Controller App

태블릿에서 바탕 화면 또는 다른 앱 실행 후, 아래 방법 중 하나로 [EAGLETON] 앱을 다시 실행할 수 있습니다.

번역필요

01 Tablet Home screen → Swiping up from the bottom of the screen brings up the Apps screen → Select the [EAGLETON]

02 Select the ■ icon at the bottom of the tablet screen, then choose [EAGLETON] from the list of running apps.



Controller Operation Description

Create a New Profile

[Power button] → Create Profile → User information input → REGISTRATION

※ When running the massage program under the user account, automatic body scanning occurs once initially and is automatically saved thereafter, without repeating. Additionally, the 'Massage Speed, Rolling Speed, Air Intensity, Xd Intensity' settings configured for each program are automatically saved.





※ Guest profiles have some services restricted.

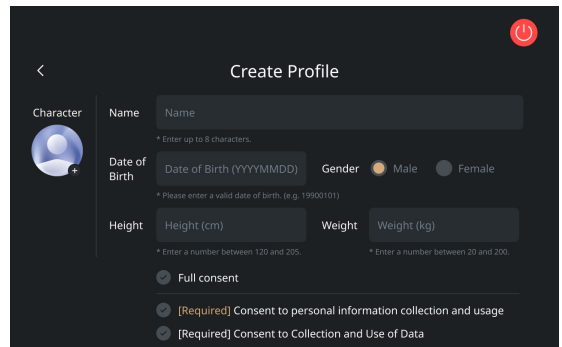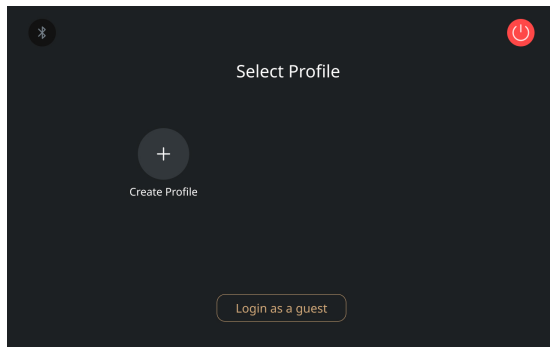

Start

[Power button] → Home → Select the desired mode → Sense body → Adjust Shoulder position · Leg length · Zero gravity leg length → Start massage

 
※ After scanning body, adjust the shoulder position using the on-screen arrow buttons or the Quick Dial button in the shoulder position adjustment popup.

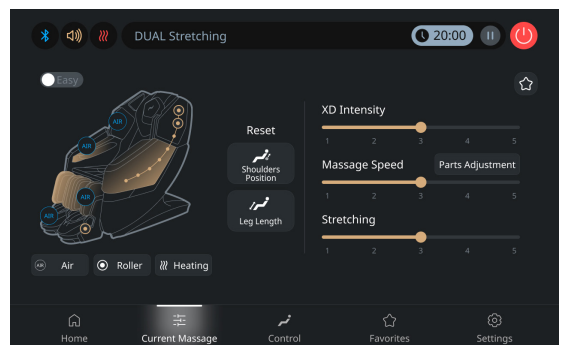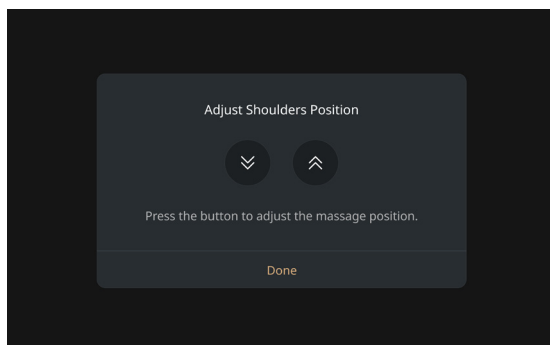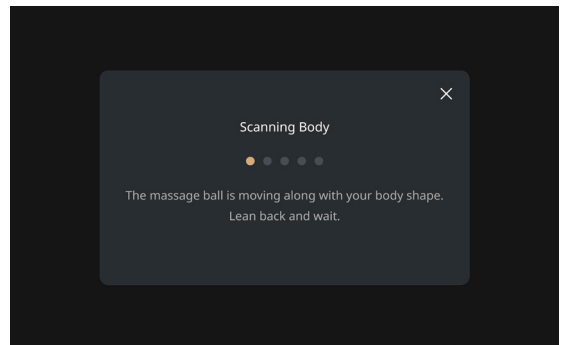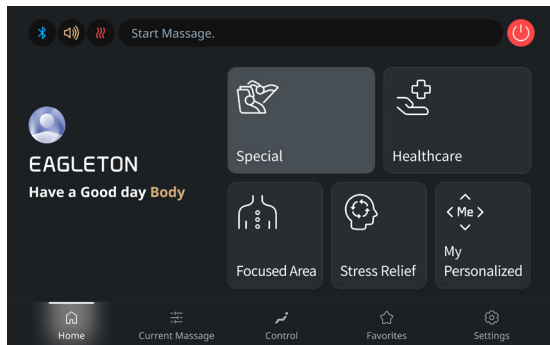

Controller Operation Description


Object detection notice

Object detection guide screen → Remove the object and press the OK → Resume massage

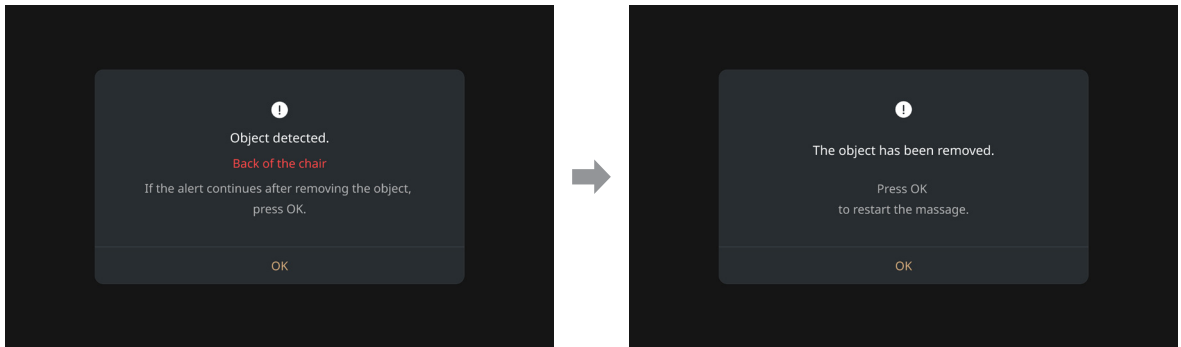


Turn off

 [Power button] → Check the guide screen and select Yes → Message ends

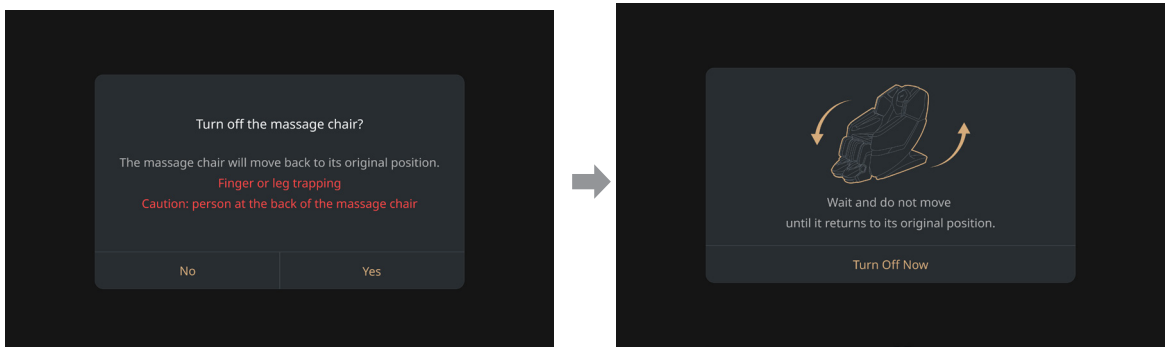

Controller Operation Description

 Home Screen Components

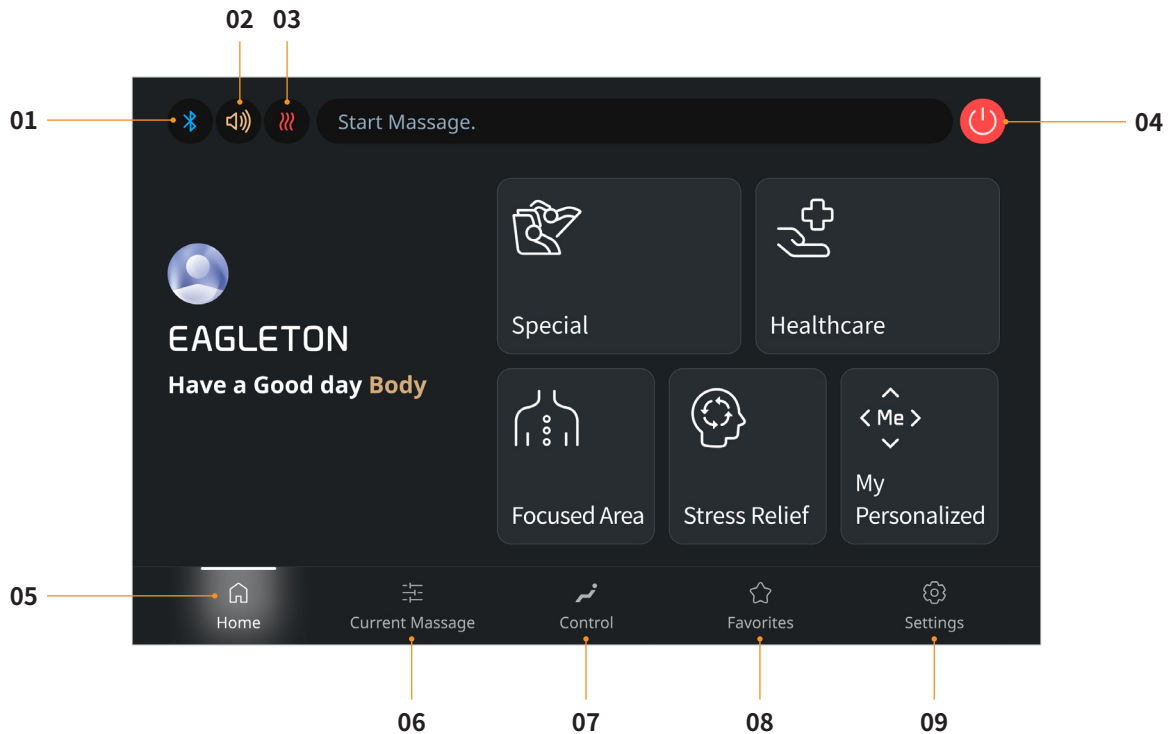

01 Bluetooth List: Establish a Bluetooth connection and set an automatic connection.

02 Volume Control: Control the massage chair volume level by level.

03 Heating: Control the heating for [All / Back · Waist / Palms / Calves] level by level.

04 Power: Turn on and off the power of the massage chair.

05 Home: Go to the home screen.

06 Current Message: Go to the screen for the massage currently running.

07 Control: Adjust [Full-Body Angle / Back Angle / Leg Angle / Leg Length / Zero Gravity / Upright / ROVO Walking] of the massage chair manually.

※ The manual motion adjustment function is not available for some automatic programs.

※ [로보 워킹]은 로보 다리가 동작하지 않는 일부 모드에서 수동으로 로보 마사지를 함께 받을 수 있는 기능입니다. (특정 모드 제외)

번역필요

When you select ROVO Walking, the [Cycling-Up and Down-Stepper] modes operate randomly.

 
08 Favorites: Go to the favorite massage list.

09 Settings: Go to the Settings screen.

Controller Operation Description

Current Message Screen Structure

※ While the automatic program runs, some screen components may be different.

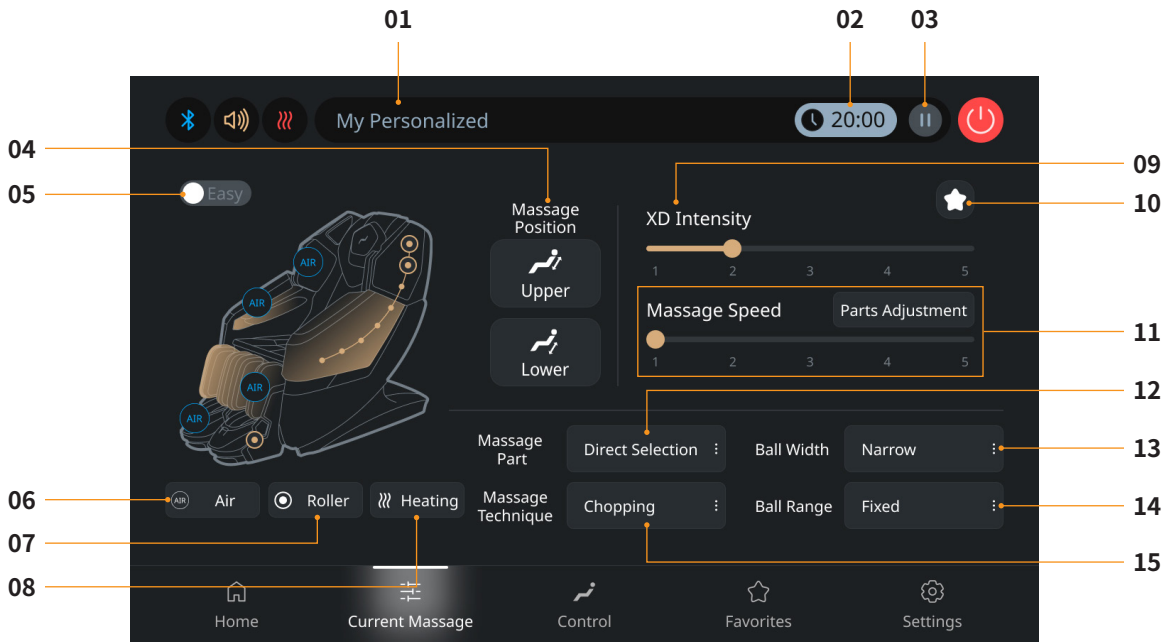

01 Message Mode Indication: Indicates the currently running message mode.

02 Message Time: Indicates the currently remaining message time. You can set the desired message time from the pop-up window.

※ The message time is fixed in some automatic programs and, therefore, uncontrollable.

03 Pause: Pause the currently running message.

04 Message Position: Use the up and down arrow buttons to control the message position.

05 Easy Mode: Message Intensity, Position, and other settings can be adjusted easily and quickly.

06 Air: Control the position and intensity level of the air massage.

07 Roller: Control the sole roller intensity level.

08 Heating: Control the position and intensity level of the heating.

09 XD Intensity: While pressing and holding the button, slide it laterally to control the massage ball projection level to the user's body shape.

10 Save to Favorites: This button saves the message currently running to Favorites.

11 Message Speed: Control the message speed level. Part adjustment is also available.

12 Message Part: When using My Personalized, you can select the desired message part.

13 Ball Width: When using My Personalized, you can adjust the left-right distance of the massage balls.


14 Ball Range: When using My Personalized - Message Part - Direct Selection, you can choose the up-and-down movement of the massage balls.

15 Message Technique: When using My Personalized, you can choose your preferred message technique.

Controller Operation Description



Special

Home → Special → Select the desired mode → Sense body and adjust shoulders → Start Message
🎵 The icon indicates a message program with voice guidance.

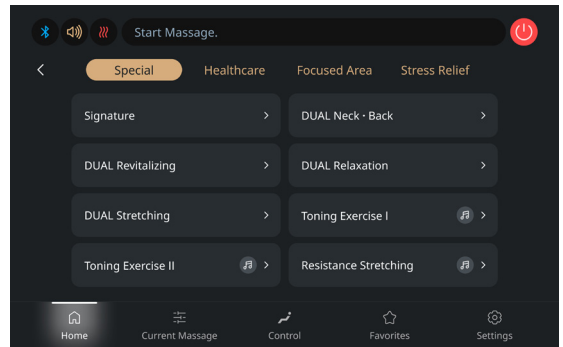



Healthcare

Home → Healthcare → Select the desired mode → Sense body and adjust shoulders → Start Message

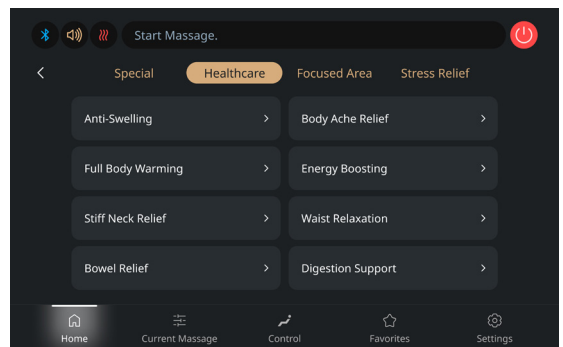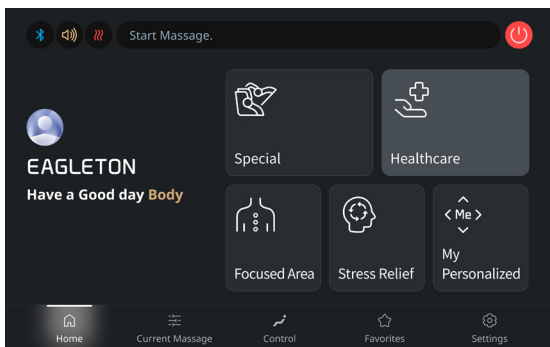

Focused Area

 
Home → Focused Area → Select the desired mode → Sense body and adjust shoulders → Start Message
🎵 The icon indicates a message program with voice guidance.

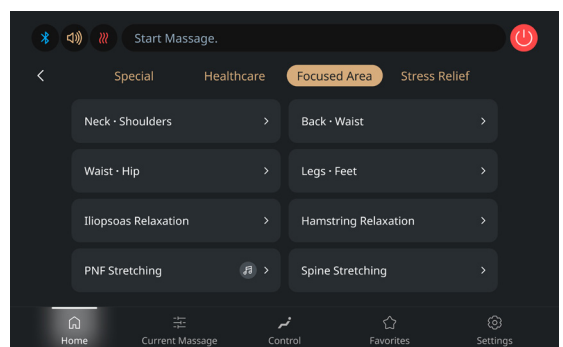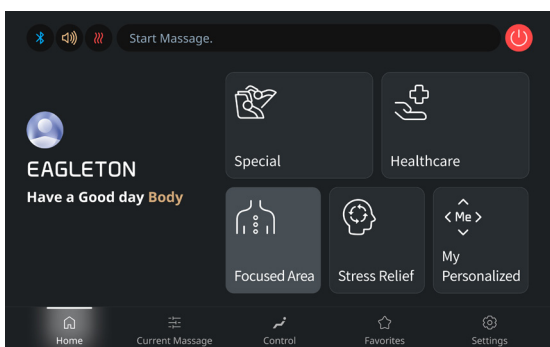

Controller Operation Description

Stress Relief

Home → Stress Relief → Select the desired mode → Sense body and adjust shoulders → Start Message
🎵 The icon indicates a message program with voice guidance.

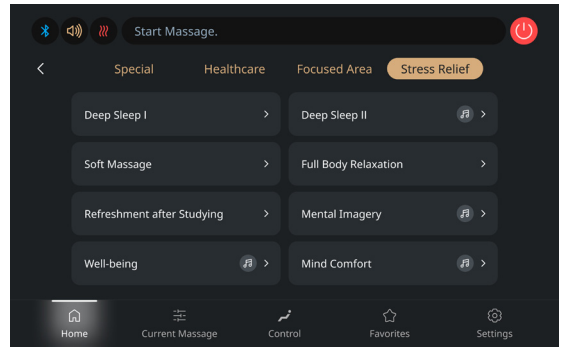


My Personalized

Home → My Personalized → Select Message Part → Select Message Technique → Sense body and adjust shoulders → Start Message

※ From the current message screen, you can set detailed settings such as the the message ball width.



※ When using My Personalized - Message Part - Direct Selection, you can choose the up-and-down movement of the message balls.

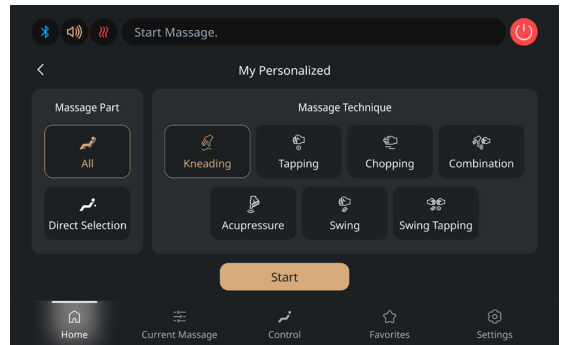

Controller Operation Description


Favorites

- 01 Registration:** Run the desired mode → Custom Message settings → Press the Star icon to save it in Favorites.
- 02 Run:** Select [Favorites] at the bottom of the home screen → Select a mode you want from the saved favorites list → Start Message
- 03 List Management:** You can check the saved mode name, message mode name, and information such as air, roller, and heating.
You can save up to 12 favorite message modes. You can select and delete a mode from the saved favorites list.

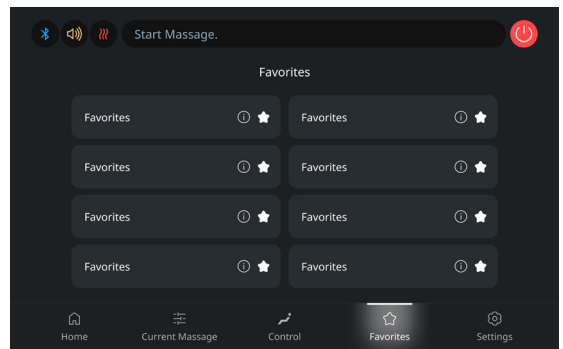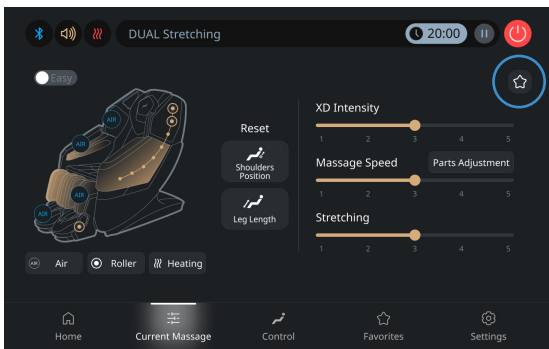


Network

 - Settings → Network Connection ON/OFF
- ※ Please select the network connection to update to the latest software.
- ※ The network is only used for product updates and not during regular use.

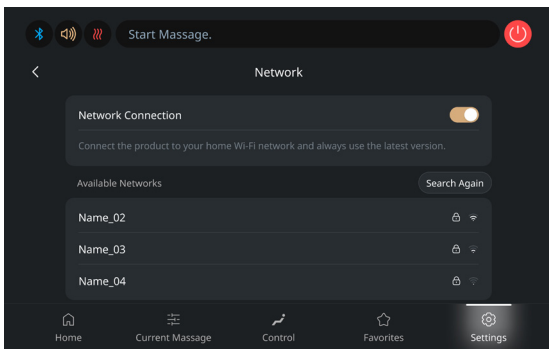

Notifications

- Settings → Notifications → App Push Notifications ON/OFF

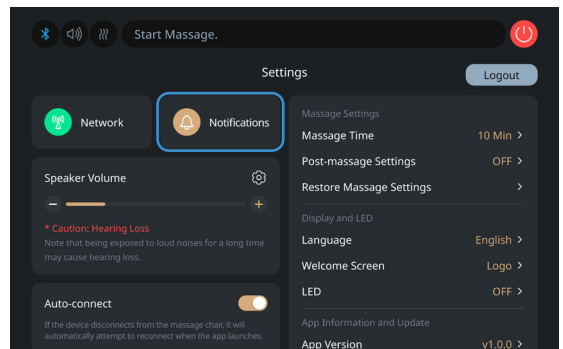


Controller Operation Description

Speaker Volume

Settings → Adjust Speaker Volume


※ Tap the speaker volume settings icon to turn the auto-reconnect feature ON/OFF.

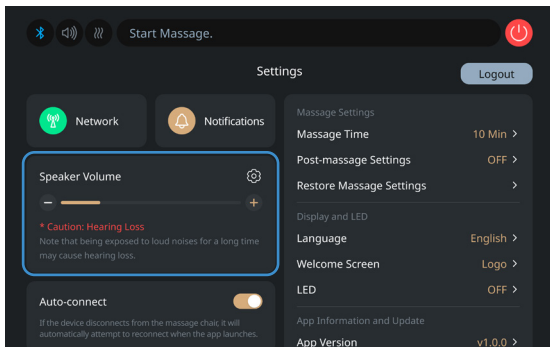

Auto-connect

Settings → Auto-connect ON/OFF


※ If the device disconnects from the massage chair, it will automatically attempt to reconnect when the app launches.

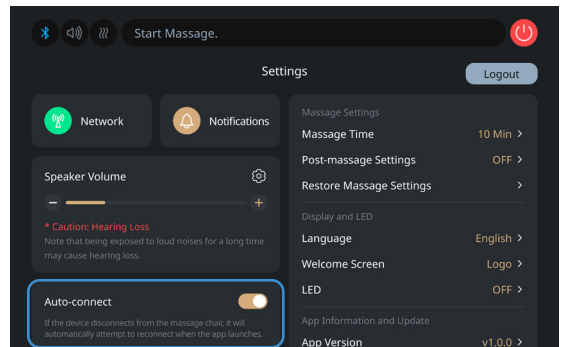

Message Time

Settings → Message Time → Select the time

※ Select the currently running message time to quickly make changes.


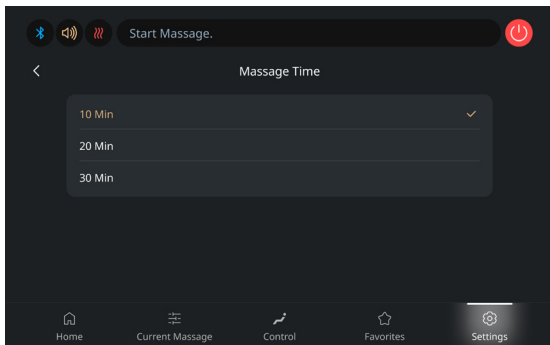


Controller Operation Description

Post-message Settings

Settings → Post-message Settings → Select the Maintain Position ON/OFF after Message · Post-Message Ball Position


※ After the message ends, you can adjust the final position, width, and protrusion level of the message balls to your preference. These settings are saved for each user account.

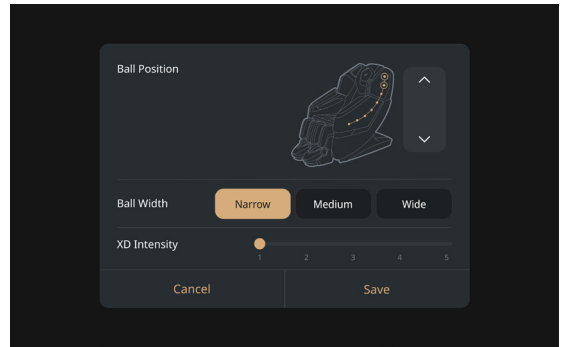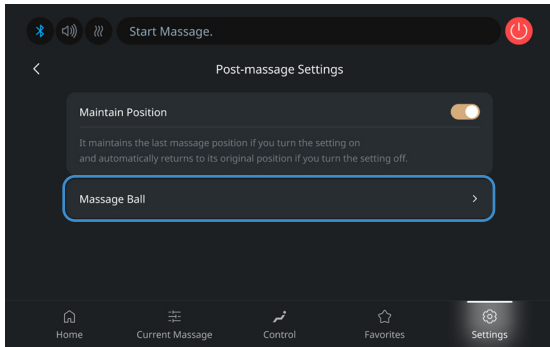

Restore Message Settings


Settings → Restore Message Settings

※ Restore Message Settings is not available during operation.

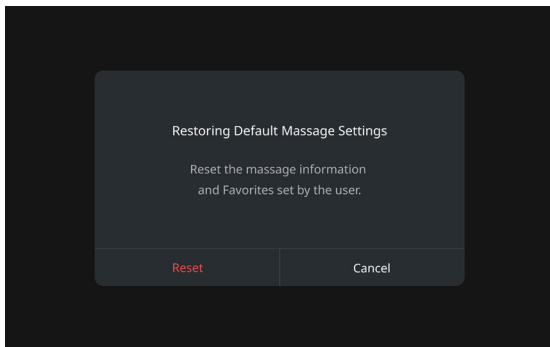

Language

 
Settings → Select Language

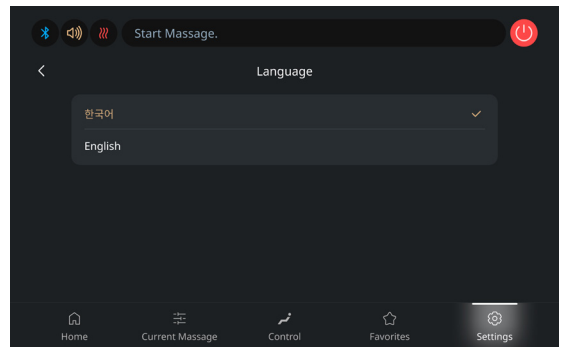

Controller Operation Description


Welcome Screen

Settings → Welcome Screen → Select the Screen

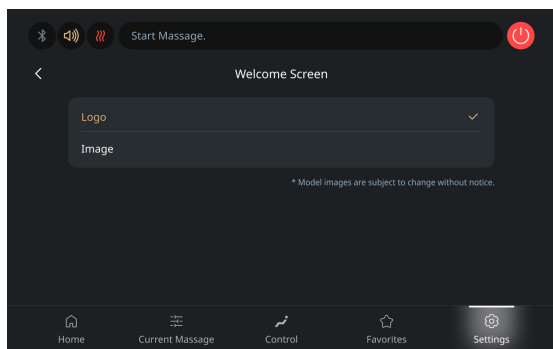

LED


 
Settings → LED → Color · Brightness

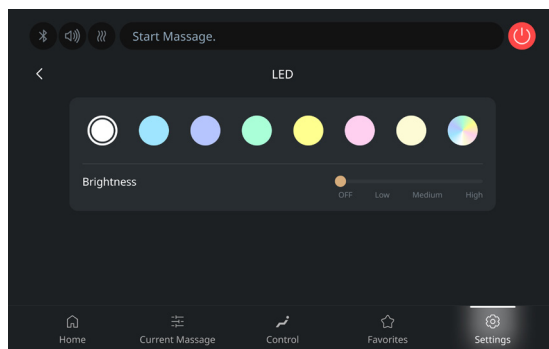

Software Update

Settings → App Version · Device Information

※ Please select the network connection to update to the latest software.

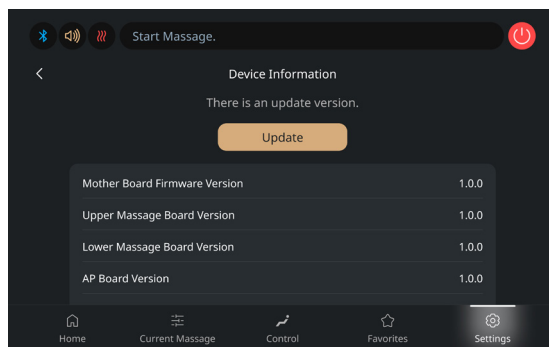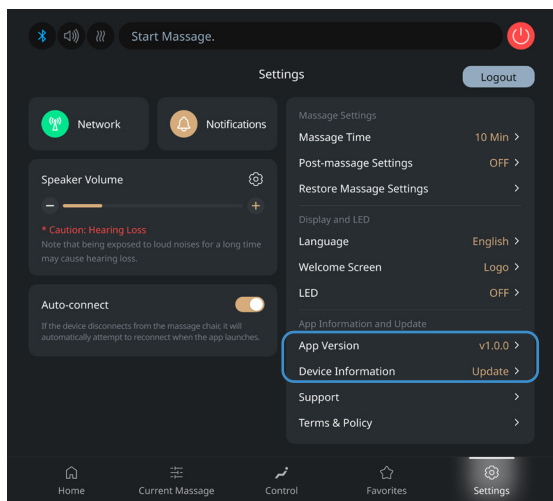

Special · Healthcare

Special	
Signature	This is a special signature massage available only on EAGLETON.
DUAL Neck · Back	A dual-module massage that quickly relieves tension, focusing on commonly strained muscles around the neck and lower back.
DUAL Revitalizing	A revitalizing massage that quickly and effectively refreshes a sluggish body using a dual-module.
DUAL Relaxation	A full-body massage delivered with gentle and delicate movements of the dual-module.
DUAL Stretching	A signature stretching massage that refreshes and relaxes the entire body.
Toning Exercise I	This massage promotes light contractions in the lower body muscles, supporting enhanced muscle function.
Toning Exercise II	An intensive massage that blends lower-body resistance exercise with cycling motions to support body line improvement.
Resistance Stretching	A massage that combines lower-body resistance exercises with PNF stretching, utilizing neuromuscular mechanisms to help strengthen muscle function.

Healthcare	
Anti-Swelling	This massage employs full-body airbags to assist in alleviating swelling.
Body Ache Relief	A massage that relaxes frequently tense muscles.
Full Body Warming	A relaxing massage combined with soothing heat in a reclined angle.
Energy Boosting	An invigorating massage ideal for waking up the body in the morning.
Stiff Neck Relief	Relaxes and focuses on four muscles attached to the occipital bone and back of the neck.
Waist Relaxation	This massage targets the muscles around the back and waist, using gentle kneading and rolling to relieve tension in the lower back.
Bowel Relief	This massage focuses on the spine and pelvis, incorporating robotic movements to assist with colon activity.
Digestion Support	A massage for digestive health that stimulates key points on the abdomen and massages around the hips after meals.

 Use of modes with stretching functions is not recommended for the elderly or pregnant women.

Focused Area · Stress Relief

Focused Area	
Neck · Shoulders	Relaxes neck and shoulders via kneading and stretching.
Back · Waist	Relaxes back and waist areas through pressure and kneading.
Waist · Hip	Relaxes waist and hips areas through pressure and kneading.
Legs · Feet	An intensive leg massage course in various styles.
Iliopsoas Relaxation	Relaxes the core muscles with static stretches.
Hamstring Relaxation	This massage helps release tension by stretching the hamstrings, which easily become fatigued.
PNF Stretching	A massage that promotes lower body revitalization by combining muscle relaxation with guided movement instructions via voice prompts.
Spine Stretching	A massage that stretches the spine by massaging the area around it, supporting the back of the head, and pulling the lower body.
Stress Relief	
Deep Sleep I	Induces sleep via soft and simple full-body massage and angle variation for 30 minutes. ※ Deep Sleep I ends in a reclined position and does not support the [Settings → Post-massage Settings] function.
Deep Sleep II	This mode gradually adjusts the massage chair angle and massage intensity over time to facilitate restful sleep. ※ Deep Sleep II ends in a reclined position and does not support the [Settings → Post-massage Settings] function.
Soft Massage	A low-noise full-body kneading massage suitable for nighttime use.
Full Body Relaxation	A full-body kneading massage that provides comfortable relaxation while in a reclined position.
Refreshment after Studying	Provides relaxation for tired students after a busy day.
Mental Imagery	A massage with soundscapes evoking a peaceful getaway, for moments of free and relaxed imagination.
Well-being	A massage that provides deep relaxation and music to relieve everyday stress.
Mind Comfort	A massage for healing, paired with music that offers empathetic and comforting messages.

 Use of modes with stretching functions is not recommended for the elderly or pregnant women.

Dual Massage Module Description

Exclusive new XD massage system

1. Wide and Deep XD Massage

- Provides a rubdown massage for a wider area using the long axis of rotation of the XD module.
- Massage balls provide a sophisticated and deep massage while drawing an X pattern.

2. Ergonomic XD Massage Angle

- Adjust the angle depending on the massage technique for a more focused massage on body parts.
- Provide strong massage for big muscles and gentle massage for small muscles.
- Realize similar angles of massage conducted by a real massage therapist.

Dual Massage Module

XD FLEX 마사지 모듈과 3D 마사지 모듈이 상하로 탑재되어 넓은 부위를 더욱 섬세하게 마사지해 줍니다.

번역필요

1. Quick and Accurate Body Contour Recognition

- Massage modules drop along the contour of the body to recognize the accurate location of shoulders by sensing curves and pressures of the human body.
- Even during the massage mode, you can adjust the shoulder position in real time.

2. Weight-sensitive module

- It provides a flexible massage depending on the user's weight.
- Elastic massage module provides a soft massage.



Product Size and Specifications

Product specifications are subject to change without previous notifications due to product improvements.

Model	BFH-4010
Power Voltage	220-240 V~, 50/60 Hz
Rated Current	280 W
USB-C	5V3A / 9V2A / 12V1.5A
Auto Timer	10 / 20 / 30 minutes
Airbags	Shoulders / Arms / Calves / Feet
Rollers	Soles
Massage Ball Range	Neck - Hips
Speaker	2 ch, 4 W
Product Weight	149.5 kg
Upright	158(Length)) X 75(Width)) X 116.5(Height) cm
Reclined	197(Length)) X 75(Width)) X 84(Height) cm
Wi-Fi	2412 ~ 2484 MHz < 89.1 mW
Bluetooth	2402 ~ 2480 MHz < 7.9 mW
General Name	Electric Massager

Customer Support Guidelines

If you encounter minor malfunctions or errors, please refer below before contacting the customer center.

Problem	Cause	Solution
Massage chair does not operate	Did not press the Power button on the controller or inner key	Press the Power button
	Program is not selected	Select and run the program
	Power is not properly plugged in	Properly plug the power into the socket
	Power plug/cable is damaged	Please contact the after-service center
	Fuses is burnt	
	Electrical circuit is malfunctioning	
Massage chair makes noise during use	General machine noise - Air pump vibration, air inlet/outlet noises - Noise due to airbag inflation - Solenoid valves opening/closing - Sheet friction	The noise is general machine noise. There is nothing wrong with the product
	Used the massage chair for a long time	Restart the machine (after 30 min)
	Tear from long-time usage	Please contact the after-service center
Machine suddenly stops during the operation	Accidentally pressed the OFF button	Press the Power ON button
	Massage time has ended	Restart the machine (after 30 min)
Machine suddenly stops during angle change	Check the object detection sensors and whether there are any objects caught between parts	Remove the object and restart the machine
	Excessive usage or shock	Restart the machine (after 30 min)
Massage balls caught or crashed into the interior sheet during the operation	Frictions between the massage balls and sheets	Rubdown technique generates such a phenomenon due to massage balls so it's not a problem
Does not go back to the original position	Excessive use	Please contact the after-service center
Overheated controller	Use the massage chair for a long time	Restart the machine (after 30 min)
Overheated power cable	Excessive load	Restart the machine (after 30 min)
	Other miscellaneous causes	Please contact the after-service center
Airbags do not activate	Air hose disconnected	Please contact the after-service center
	Air-related power cord is disconnected	

Warranty Terms and Conditions

Warranty

- **The warranty covers labor, parts and framework of the massage chair**

- **The warranty period** may differ according to your point of sale, please verify with your seller.

All goods sold hereunder, except accompanying accessories, documentations, or enhancements, are warranted to be free from defects in material and workmanship at the time of delivery to Purchaser and covered for the above, **within the Warranty Period.**

Defective material may be returned to Seller after inspection by an agent of Seller and upon receipt from Seller of shipping instructions specific to the defective goods authorized by Seller to be returned.

Goods returned in accordance with the foregoing procedure will be replaced or repaired, at the option of Seller, and returned to Purchaser without charge.

This warranty is subject to the following LIMITATIONS AND EXCLUSIONS:

Limitations

- This express warranty applies to massage chairs ONLY, and not to accompanying accessories, documentation or enhancements;
 - This warranty is non-transferable;
 - This warranty is valid only within the European Union or United Kingdom depending on the location of your point of sale ;
 - The responsibility of Bodyfriend and its seller and Purchaser's exclusive remedy under this warranty is limited to the repair or replacement of defects in material and workmanship, as set forth above. Bodyfriend and its Seller are not responsible for any consequential damages resulting from the breach of this or any other express or implied warranty with respect to the goods;
 - This express warranty is the only warranty applicable to this transaction. It excludes all other express oral or written warranties and all warranties implied by law with respect to the goods, including any warranties of merchantability or fitness for a particular purpose;
 - This warranty does not extend to any of BODYFRIEND's products which have been subject to misuse, accident or improper installation or storage, maintenance or application, nor does it extend to products which have been repaired or altered outside of BODYFRIEND or its authorized agents, nor does this warranty extend to any labor charges for removal and/or replacement of the nonconforming or defective product or part thereof;
 - Every claim under this warranty or related to this purchase order shall be deemed waived by Purchaser unless made in writing within the period of warranty communicated by your seller of the receipt of the goods to which such claim relates; AND
 - This warranty is void in the event that repairs are made by anyone other than Seller without prior authorization from BODYFRIEND.
- The terms of this warranty shall be governed by the laws of the European Union.

Warranty Terms and Conditions

Exclusions

This express warranty is void without this warranty card and requested information (date of purchase, installation, RMA, etc.).

This express warranty does not cover damage resulting from improper installation or use, neglect, dropped product, unreasonable maintenance, failure to follow instructions, unauthorized repairs, alterations, modifications of original condition, and cosmetic alternations. Furthermore, warranty does not cover damage resulting from improper use of electrical/power supply; loss of power; electrical disturbances, power surges.

Also, damage or cracked screen because of personal misuse, excessive force, transportation damage, theft, abuse, misuse, vandalism, or natural disasters (fires, floods, rust, corrosion, sand, dirt, windstorms, hail, earthquakes, or any exposure to weather conditions) are not covered under stated warranty. BODYFRIEND does not honor warranty for products purchased by or through unauthorized dealers, product used commercially or for commercial purposes, and time lost by owner during the time the product is being replaced, at a repair facility, etc. Natural occurrences such as, but not limited to softening/hardening of foams and composites, fading, wear, pilling of fabrics, natural markings, grain and dye variations in leather, and failure of attach points does not validate issue of warranty, as well as items intended to be periodically replaced by Purchaser during the normal lifetime of a product including, but not limited to batteries, light bulbs, and etc. Seat cover replacement and other accessories are not covered under warranty.

Labor


Labor Service Period may differ according to your point of sale, please verify with your Seller. However, Purchaser is responsible for all shipping, duties, and brokerage fees.


Upon expiration of the Labor Service Period, Purchaser shall pay for any labor service charges.

Labor services are limited to the replacement of the defective product or parts with a similar product of equal or less value. If replacement is not accepted by Purchaser, Seller or its labor service provider is no longer responsible for further service under this labor warranty.

EAGLETON

Product Name Electric massage chair
Model BFH-4010
Customer Service irest@irest-europe.com
Manual Number 250730

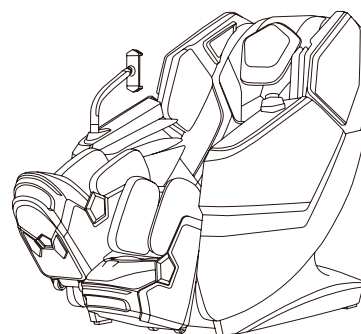

 Please remove this manual according to the local separate waste collection rules.
